



How to use Art-Net IN/OUT

1. Configure Art-Net IN


- Connect the computer to your installation network
- In our software go to **Tools** -> **Option** -> **Art-Net** tab -> **Input** tab

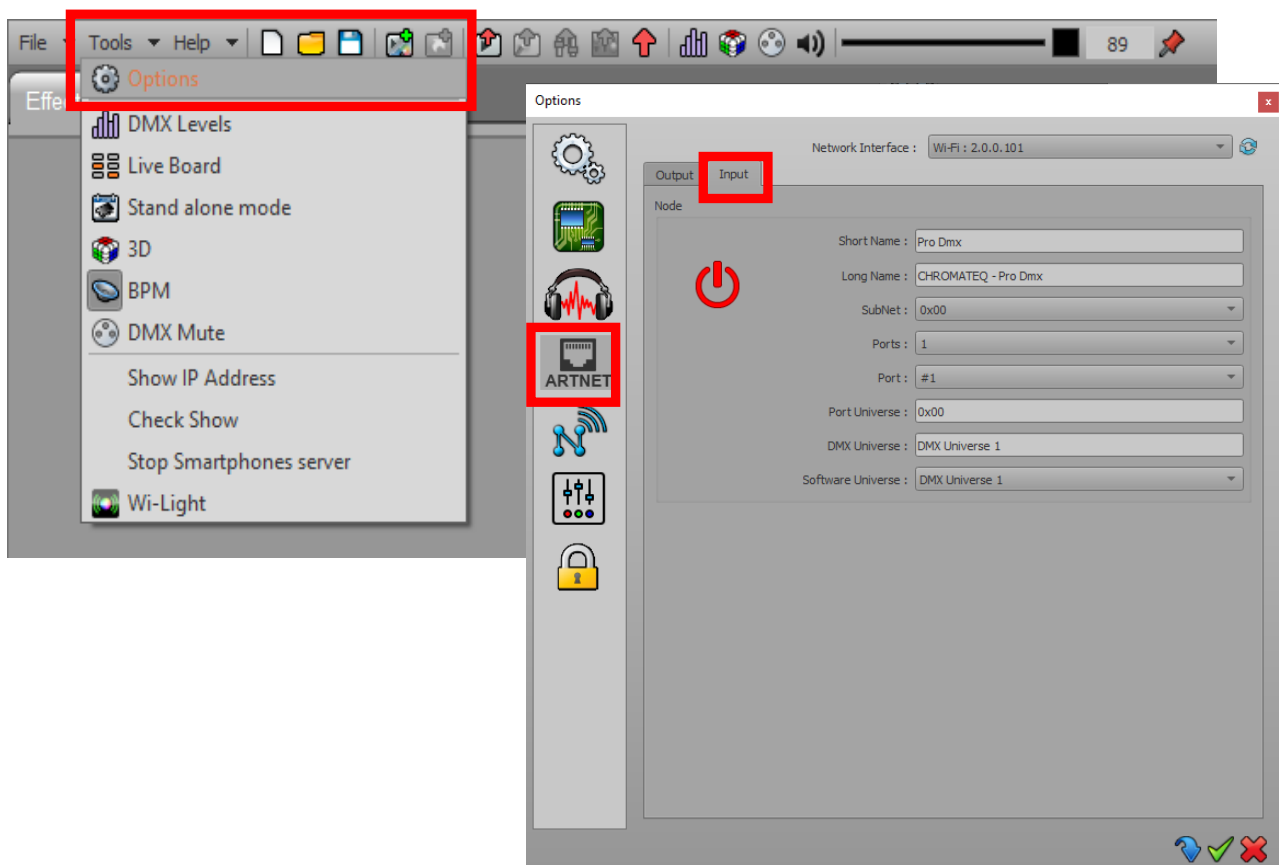

- Then select the same **Network Interface** connected to your network

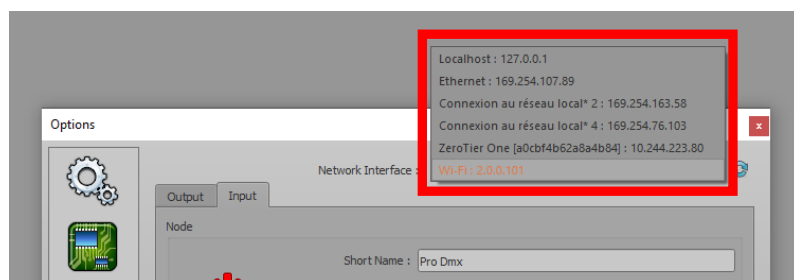


- Finally activate the Input button

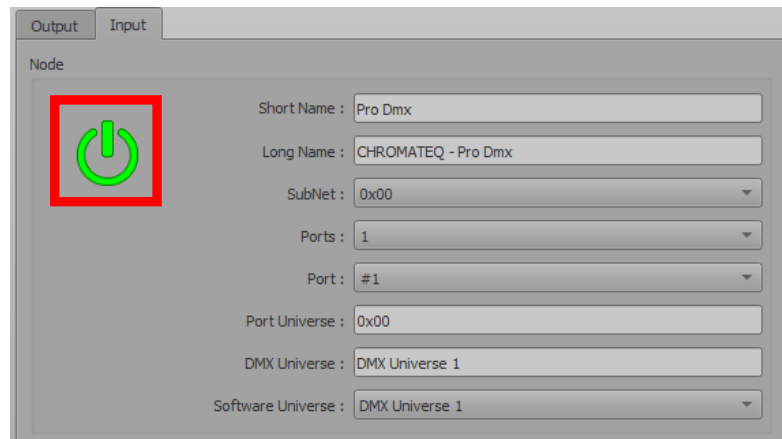

Now the software is visible on the network as a node.

2. Configure Art-Net Out


- In **Art-Net** tab select **Output** tab, nodes on network are displayed
- Then configure each node according to your installation

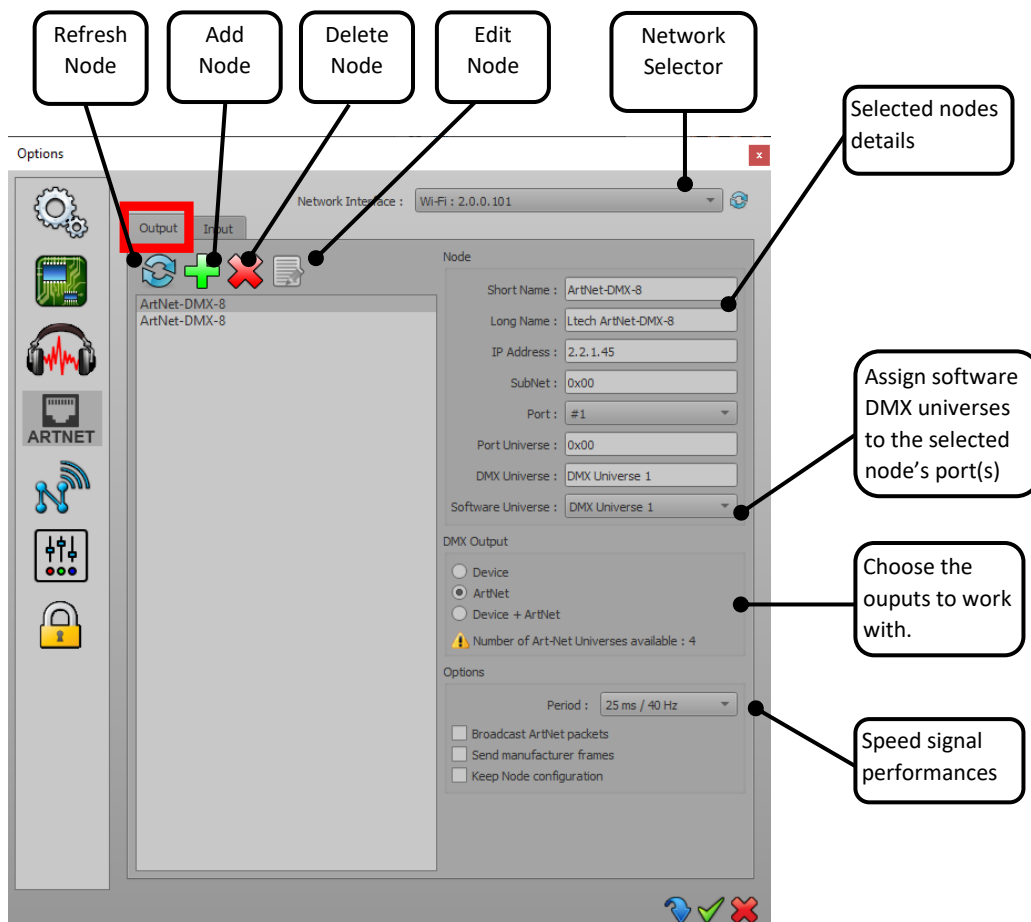


3. Configure DMX-IN triggers

Once Art-Net settings are correctly configured you need to set DMX IN triggers on each function you want to control in the software (Effects, Scenes, Channels...)

- Keep **Alt** pressed and left click on the function you want trig to access to the triggers windows
- Select the **Input** tab

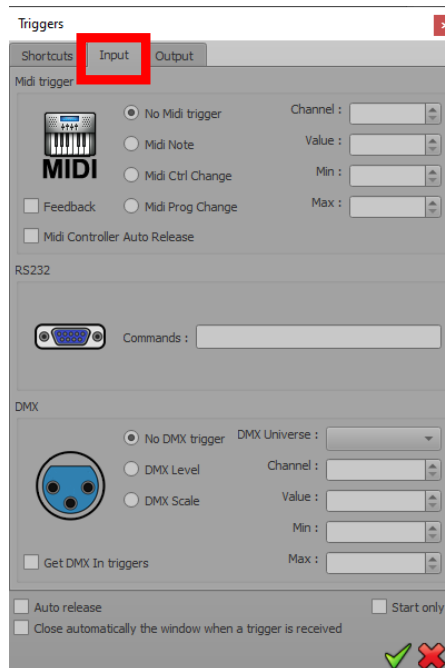

- Then enter your triggers values in the DMX area and validate

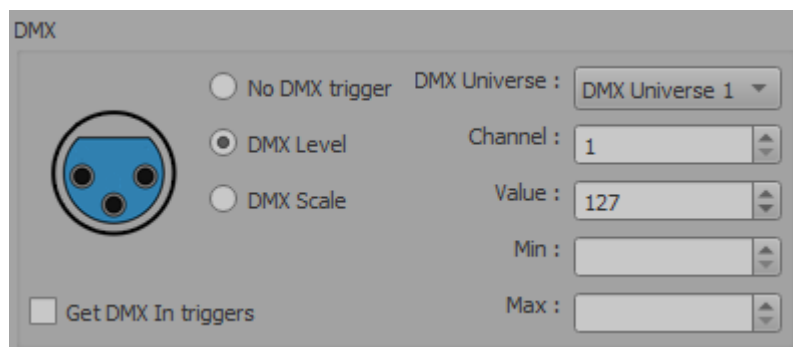

Now Art-Net IN allow DMX signal to trig the software and the software play Art-Net to the nodes configured as output.