


# How to use dry contacts in LIVE

## Software settings :

- Right click on the Scene button to edit trigger options
- Go to shortcuts tab
- Check « Get stand alone triggers »
- Select the External contact trigger desired
- Choose an option if needed (Auto release, Start only)
- Validate

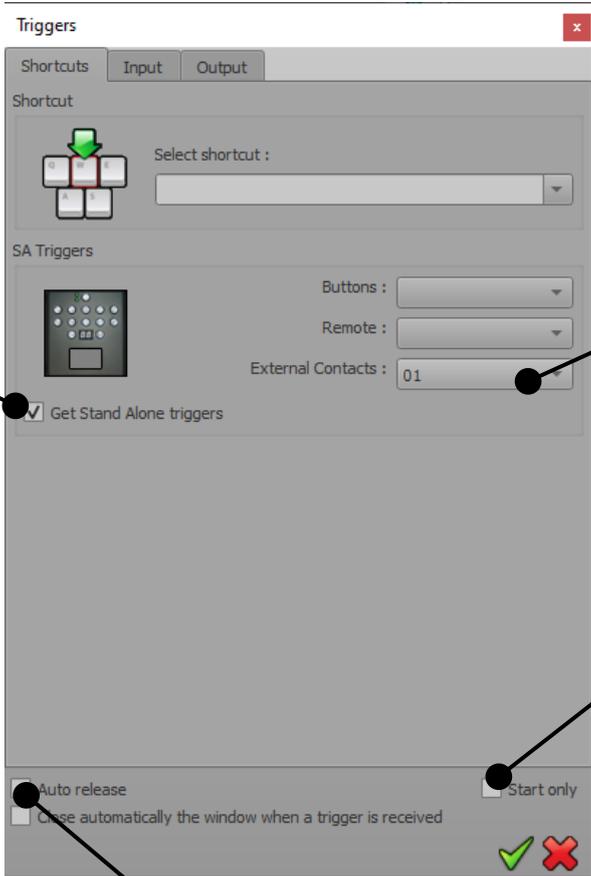

The screenshot shows the 'Triggers' dialog box with the 'Shortcuts' tab selected. The 'SA Triggers' section is active, and the 'Get Stand Alone triggers' checkbox is checked. The 'External Contacts' field is set to '01'. The 'Auto release' checkbox is unchecked, and the 'Start only' checkbox is checked. The 'Validate' button (green checkmark) is visible at the bottom right.

Callouts:

- Check to get stand alone trigger in Live
- Select the External contact desired number
- Uncheck to Start the scene at the first contact and stop at the second
- Release the scene as soon as the trigger is released, the scene remains activated as long as the trigger is active itself

**Hardware :**

