SAVE A TIMELINE IN STANDALONE

Save a timeline in a compatible interface to play programmed light sequences in standalone.

Create standalone Blocks in the timeline



- 1. Right click on a line of the timeline
- 2. Select "Add Stand Alone Line"

▶●॥५╭▤ ◻◀▶战	Duration: $-$ 0 h + $-$ 15 m + $-$ 0 s Time: $-$ 0 h + $-$ 0 m + $-$ 0 s	+ - 0 + + - 0 +	+
+		2m 3m	4m
Stand Alone +	SA Block #1	SA Block #2	3
Line 1 +	Zone A - Red Zone A - Rainbow	Zone A - On/Off	+ Add SA Block
Line 2 +	Zone B - Rai Zone B - Fire	Zone B - Checkerboard Zone B -	Zone B - Fire

- 3. Right click in the "Stand Alone" line and select "Add SA Block"
- 4. Choose the size of the "SA Block" to match thedesired sequence of the timeline. Create as many block as needed

Save Blocks in standalone

	P		Sc Fx	사 아은 당성			
							TIT PANEL ALONE OF BOARD
Device #1 : DIN-E 1024 F01402							🕑 In / Out Config 🕒 Clock 🔯 Options 🗖 Master / Slave 🛹 Commands 🚽 Zones
							In / Out Config : AB Out Merge Dmx In / Dmx Out
							DMX A : U1 🔻 Channels : 384 💌
							DMX R · 112 · Channels · 0 · ·
	× ☑ ↓ ● ୬)						
		Name	Duration	Properties	Triggers	Zone 🔺	DMX C : Channels : 💌
	1	Red	00m 01s 000	00:00:000	1 .	A	
	2	Rainbow	00m 03s 000	00:00:000 00	2 .	A	
	3	On/Off	00m 02s 000	00:00:000 00	3	A	ArtNet / sACN : U1 ▼ <===> U4 ▼
	4	Aller-Retour	00m 02s 960	00:00:000 00	4	A	
	5	Tubes	00m 02s 920	00:00:000 00	5	A	(2)
	6	Checkerboard	00m 04s 000	00:00:000 00	6	A	
	7	Fire	00m 01s 960	00:00:000 00	7	A	
	8	Multi	00m 03s 000	00:00:000 00	8	A	Device Triggers Time triggers Schedule activation
	9 🗸	SA Block #1	01m 25s 000	00:00:000 #1 🗈		A	
	1	SA Block #2	01m 30s 320	00:00:000 🗰 1 🗈		A	
	17 🗹	SA Block #3	00m 53s 440	00:00:000		A	
	12 🗸	SA Block #4	00m 53s 440	00:00:000 👘 1 🔿		A	
1	13	Green	00m 01s 000	00:00:000 00	1 🖌	В	

- 1. Check the desired Block, it is possible to assign them to buttons or configure triggers as for a scene
- 2. Define the universe range that must be saved when writing



- 3. Click on "Save in memory"
- 4. Select "ARTNET>Save on external SD Card"
- 5. Choose the micro SD card inserted into the computer

Once the show is saved simply insert the Micro SD into a compatible interface configured in Art-Net mode. Care must be taken to ensure that the network settings of the interface are properly configured.