

Wi-Light 2 Online


CONNECTION

2 – Select the network tab

3 – Check your network card


4 – Enter your user name and password

5 – Select the internet mode

In internet mode you must use a different internet access from your interfaces. If you want to use a local network select the local mode 


It is possible to select both mode to automatically select the good network

1 – Go to setting page

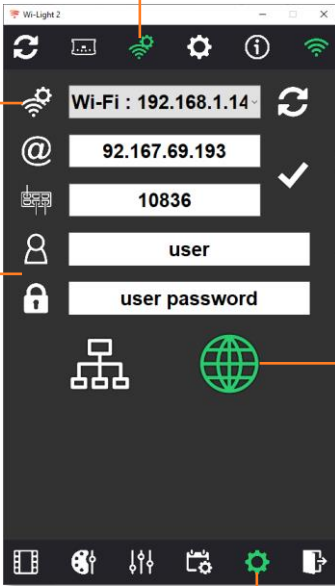

6 – Go to Interfaces page

7 – Select the desired device

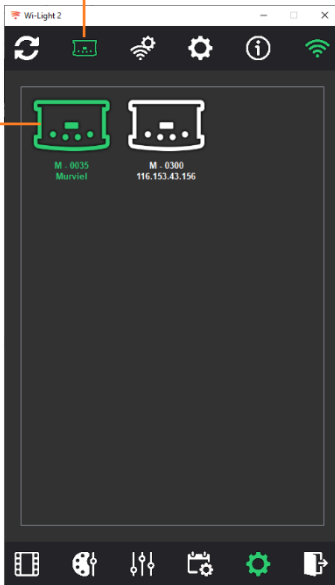

TO RESUME IN 10 STEPS

- 1- Update your CQSA-E 1024 device with the correct firmware.
- 2- Write a new show in memory.
- 3- Connect your CQSA-E 1024 to your Internet box or router with internet access or an accespoint with internet.
(DHCP : nothing to do, Static IP : need to setup the gateway of your internet access)
- 4- Connect to your account from the latest V.2 software. (Optional)
- 5- Add your local and USB interface to your user account. (Optional)
- 6- Download the latest version Wi Light 2 application.
- 7- Connect your mobile device to your internet access (4G, access point, etc...)
- 8- Start the Wi L ight 2 App.
- 9- Select the good DMX interface in the list and use the commands functions of the APP.
- 10- If your device and your mobile are well connected to internet, then you can find it directly in the app setting and have immediat have internet remote control of your device.